



(BT3PRO Z83II Z83V) How to set the call to automatically boot

Preparation: Machine, Keyboard, Mouse


- 1, First boot, press the delete button, enter the BIOS interface

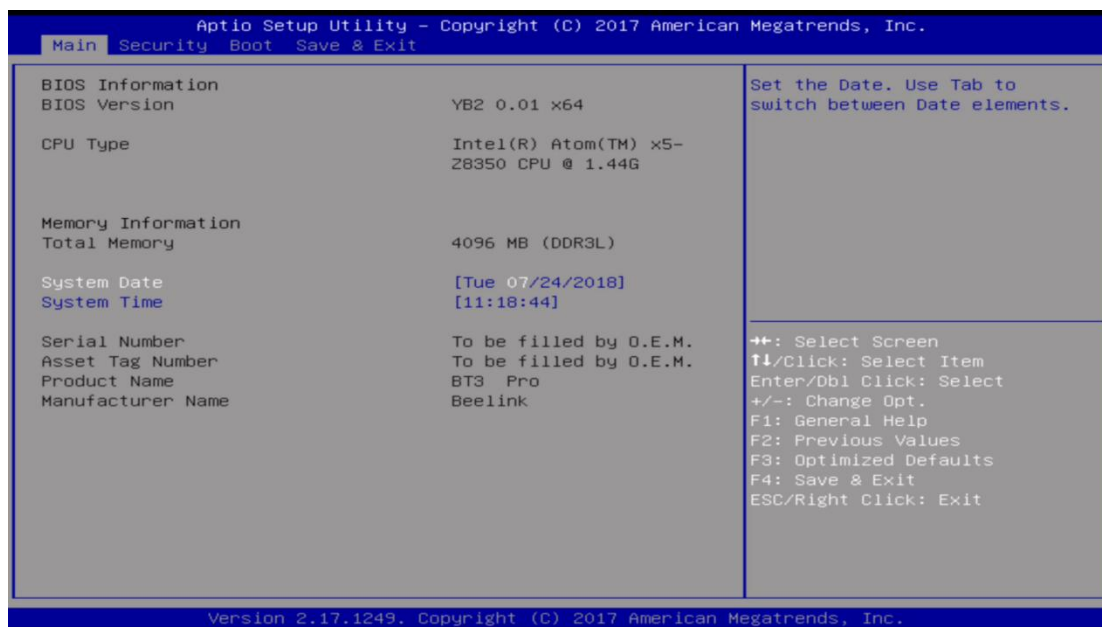

- 2, keyboard left and right button to select Boot, select Automatic Power on

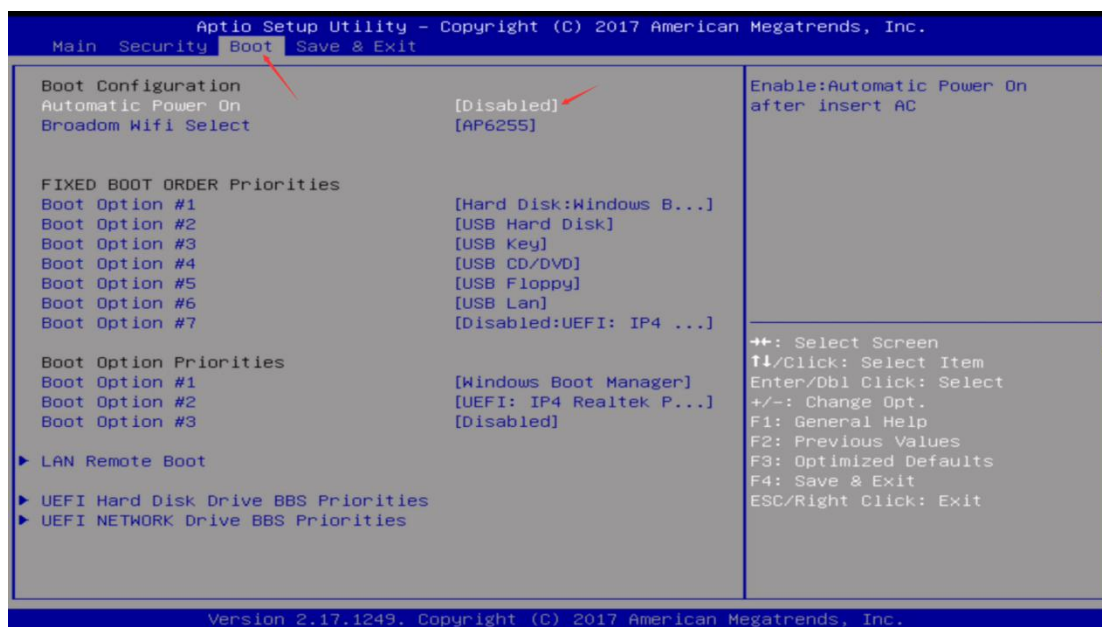

3, Press the keyboard Enter button, change Disabled to Enabled

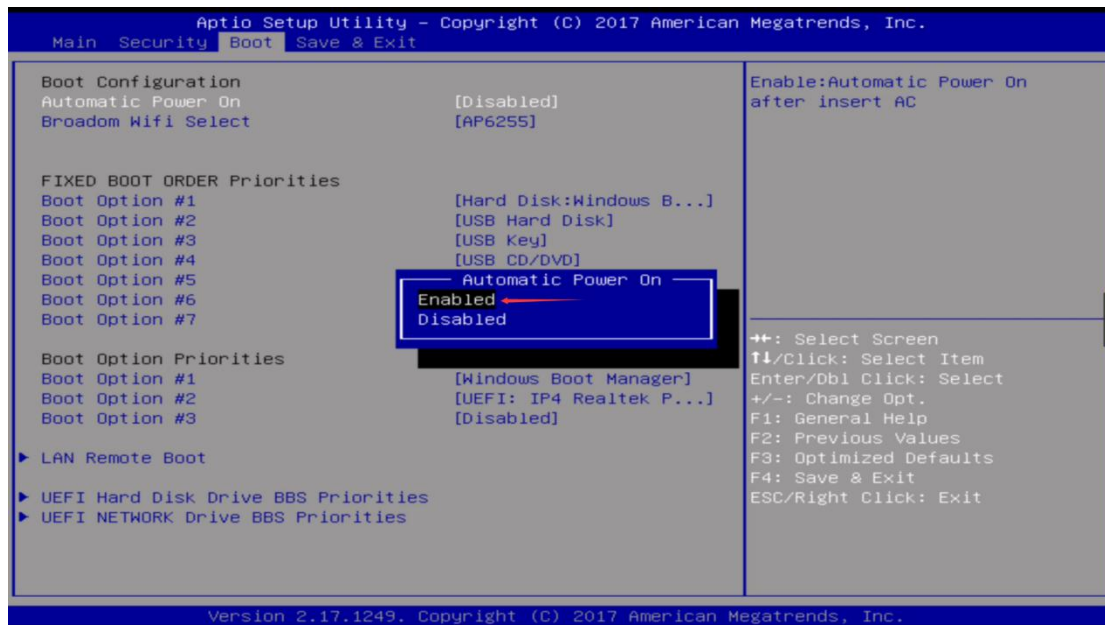

4, Press F4 to save, select Yes, the system will complete the setup and will automatically restart.

Thank you !

Read more: www.bee-link.com

Email: beelinkservice@bee-link.com