

AS Series How to Update BIOS?

Tool Download——Click to download

1. AS5 BIOS Download link:

- a) [PN52 ASUS 12100](#) (USB Flash, for all system)

2. AS6 BIOS Download link:


- a) [PN53-G 10400](#) (USB Flash, for all system)

- b) [PN53 21300migrate01](#) (USB Flash, for all system)


- c) Note : If the machine originally has any version of the **PN53-G BIOS (1.01/1.02)**, you can directly update to **PN53-G-ASUS-10400.CAP** ; If the machine has **PN53 BIOS 2.13.00**, you must first update to the intermediate BIOS **PN53_21300migrate01** before updating to **PN53-G-ASUS-10400.CAP**.

Update Steps

1. Put the **.cap** file in the root directory of the USB drive, then insert the USB drive into the machine.
2. After turning on the computer, press the **Del** key to enter the BIOS interface. Navigate to the **"Tool"** tab, select **"Start ASUS EzFlash"** and choose **"YES"**.

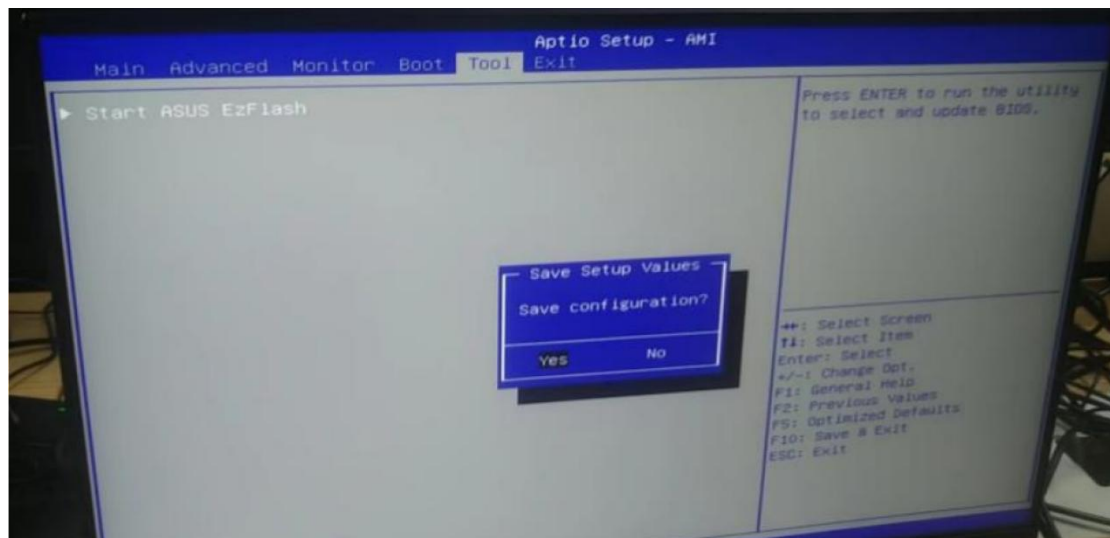

3. Select the BIOS file to be updated (**the .cap file**), press Enter, and choose **"YES"**. The BIOS is now being updated. **Do not turn off the power or force a restart during this process, or the machine may become unbootable.**

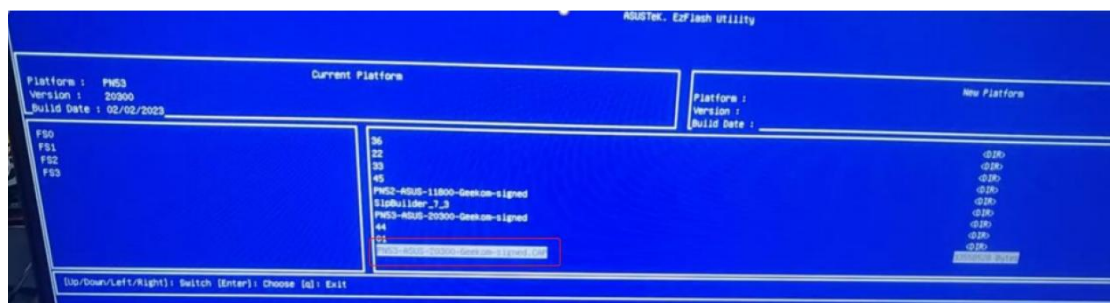

4. Once the update is complete, the machine will automatically restart, indicating a successful flashing process.

