



How to enter the BIOS settings to automatically power on when incoming calls

1. Keep pressing the keyboard "F7" after booting, enter the BIOS, use the keyboard arrow keys to find Chipset, select PCH-I/O Configuration, and press Enter to enter

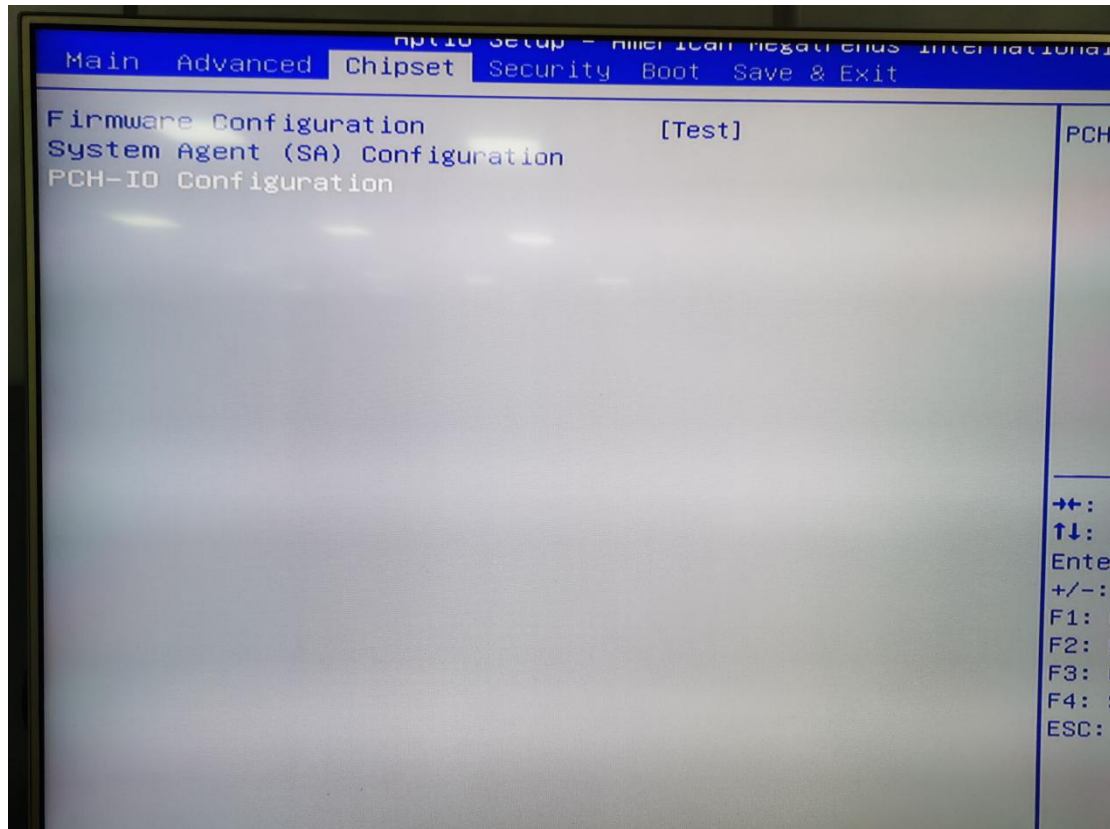

2. Select Auto Power On by up and down, press Enter to select

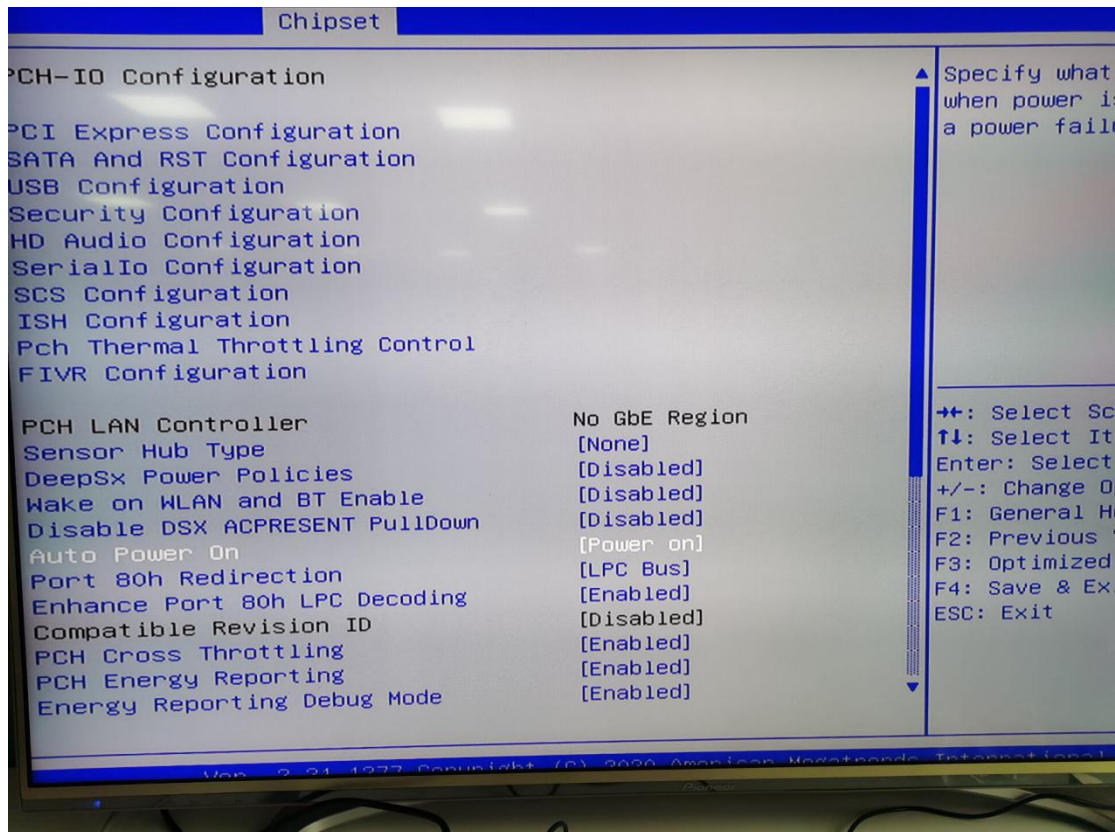

3. Use the up and down keys to select on or off

