


Instructions to upgrade the firmware and changing the boot logo / CarPlay Home logo of CP89-HD

Step 1: Download the latest V0.0.9 firmware (2024-1118-2131_PND_MINIX_V0.0.9.zip)

 2024-1118-2131_PND-MINIX_V0.0.9.zip 97,437 KB


Step 2: Unzip the file to the root directory of a FAT32-formatted USB drive (root directory means not putting inside of any other folders, as shown below:

containing two folders (scripts, update), and one .md5 file:

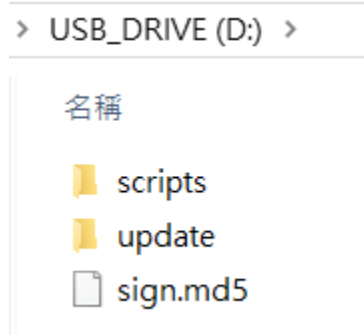


Step 3 (Optional): If you want to change the boot logo / CarPlay Home logo, please also download and unzip the “logo.rar” file, then unzip this folder named “logo” and put it inside of the “update” folder, it will become (your thumb driver letter):\update\logo, e.g.: D:\update\logo

(Attention: You may skip this step and also step 4 & 5 if you have no intention to change the boot logo or CarPlay Home logo of the device)

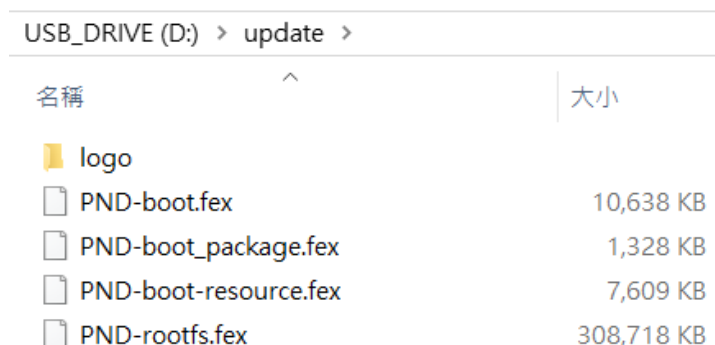

Step 4 (Optional): Replace the "bootlogo.bmp" file inside the "logo" folder with the target file that you want to replace with (**NOTE: Keep the same file name, it has to be a 24-bit bitmap file with 1920x720 pixels, 300 DPI**)


(Attention: You may skip this step if you have no intention to change the boot logo of the device)

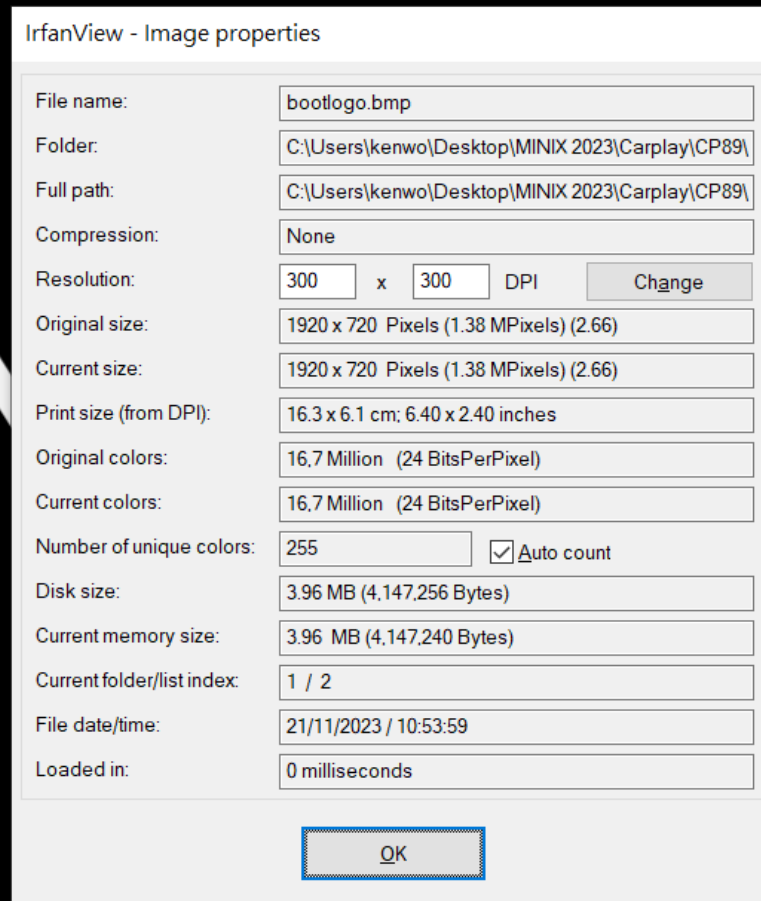

Step 5 (Optional): If you also want to replace the CarPlay Home logo, then you can also replace the "carplay_logo.png" file inside the "logo" folder with the target file that you want to replace with.

If you don't want to change the CarPlay Home logo, just keep the file in the folder as it is. **(NOTE: Keep the same file name, it has to be a 24-bit png file with 180x180 pixels, 72 DPI)**

(Attention: You may skip this step if you have no intention to change the CarPlay Home logo of the device)

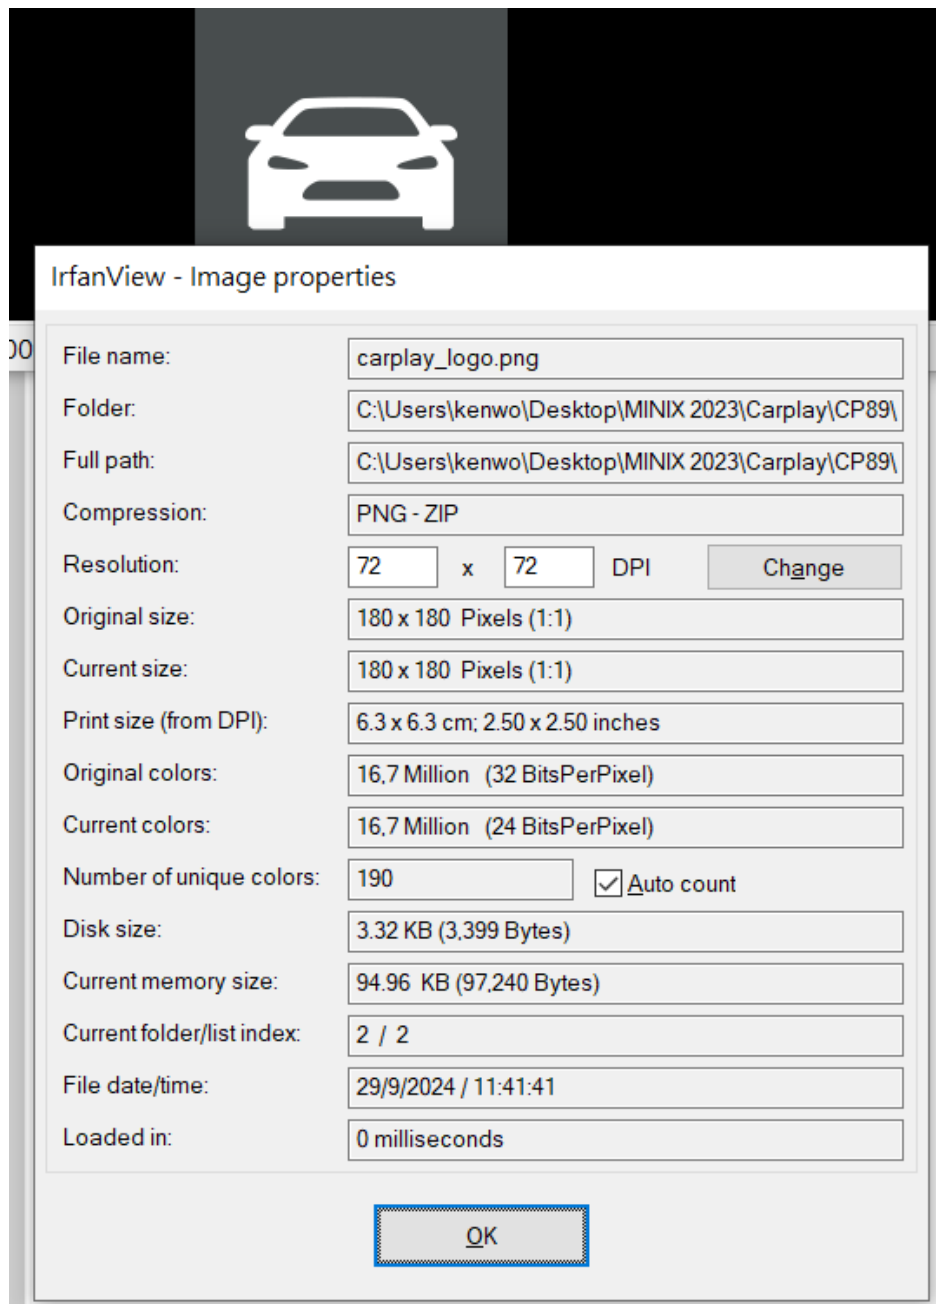


Step 6: Power on the CP89-HD, then plug in the USB drive containing the upgrade files to the port marked as “USB” on the back of the CP89-HD, please note that you need a USB Type-C male to Type-A female adapter if you are using a USB-A flash drive.

Step 7: Go to Settings -> About -> Tap on “System Update”, the system will then check the upgrade file integrity and proceed to upgrade if the files have no problem, if you have replaced the “bootlogo.bmp” and the “carplay_logo.png” inside the update -> logo folder, these logos will also be changed automatically AFTER firmware upgrade is completed.



Step 8: You may remove the USB drive from the CP89-HD once the firmware upgrade is completed. If you have replaced the boot logo and CarPlay Home logo in step 3-5, you shall also see the below message telling you that the logos have been changed.

Congratulations! It's OK to remove the USB drive now.

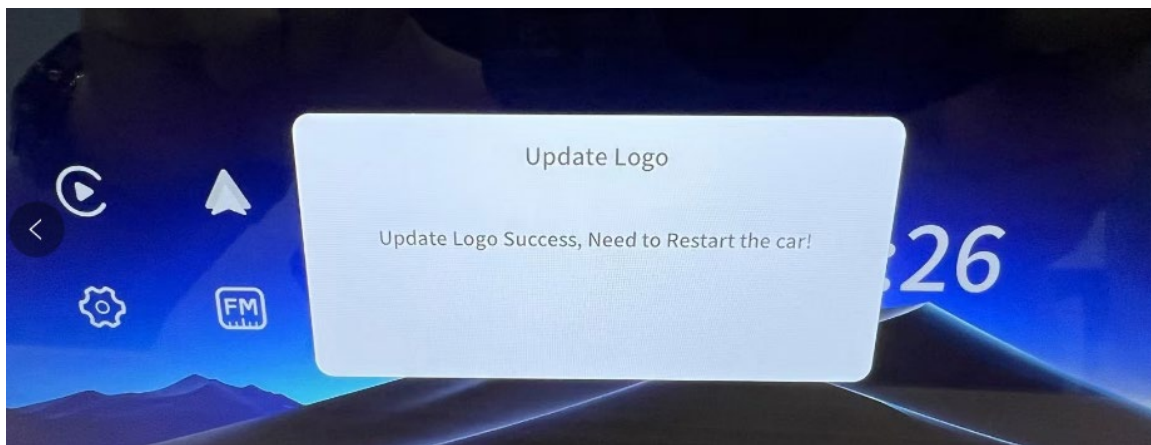

Step 9: After unplugging the USB drive, you may restart the device and see the new logo. (Only if you have changed the logos in step 3-5)

